


BROOKLYN 2 DOOR 1 DRAWER WARDROBE ASSEMBLY INSTRUCTIONS

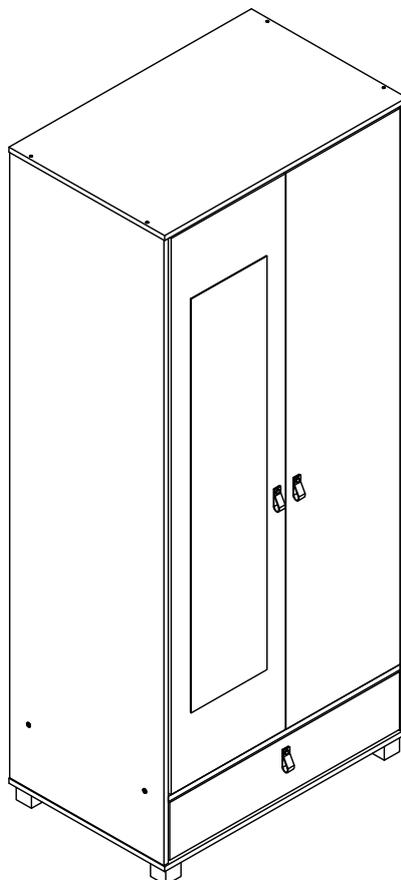

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.



THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

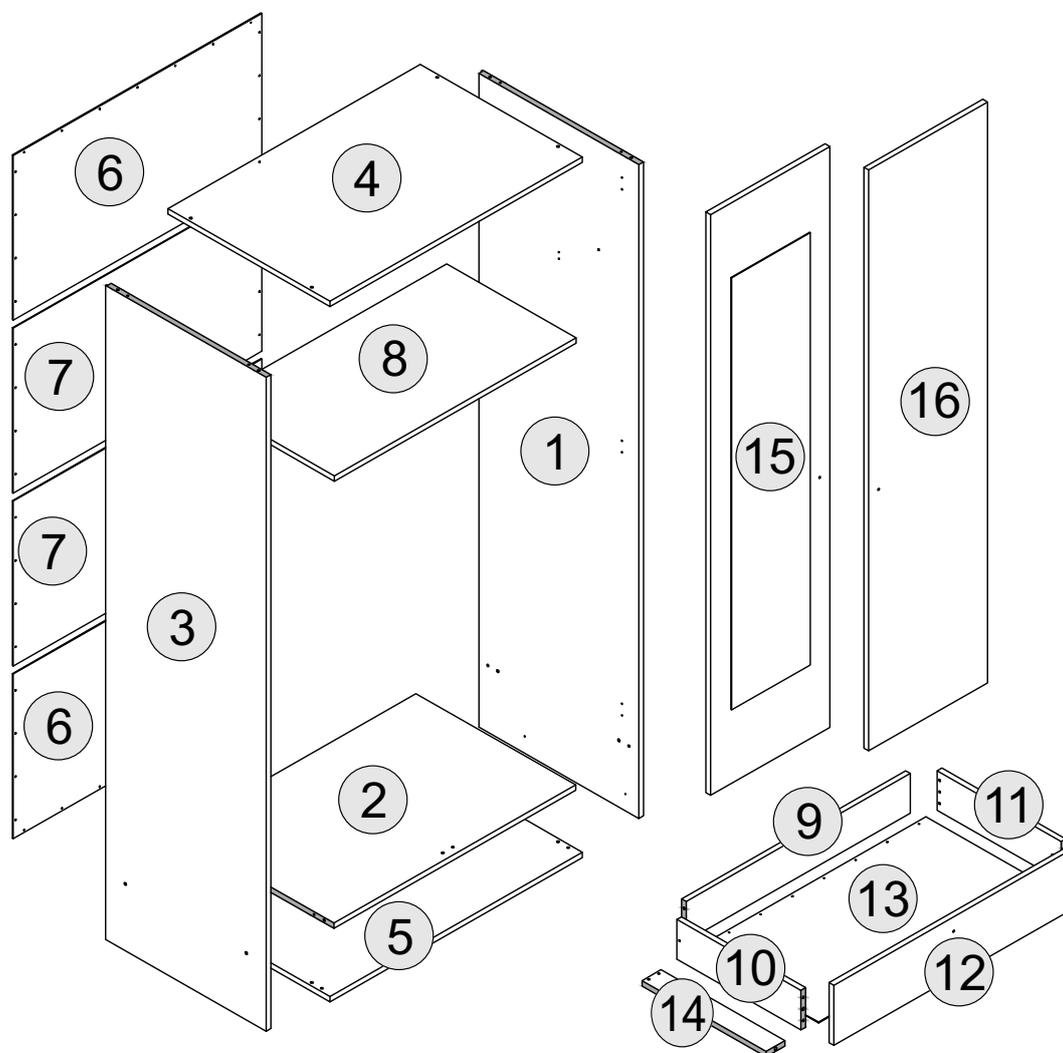


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-101-193-EU-01	Side Panel - Right	1	1/2
2	S100-101-193-EU-02	Shelf Panel	1	1/2
3	S100-101-193-EU-03	Side Panel - Left	1	1/2
4	S100-101-193-EU-04	Top Panel	1	2/2
5	S100-101-193-EU-05	Bottom Panel	1	2/2
6	S100-101-193-EU-06	Back Panel 1	2	1/2
7	S100-101-193-EU-07	Back Panel 2	2	1/2
8	S100-101-193-EU-08	Small Shelf Panel	1	1/2
9	S100-101-193-EU-09	Drawer Back	1	2/2
10	S100-101-193-EU-10	Drawer Side - Left	1	2/2
11	S100-101-193-EU-11	Drawer Side - Right	1	2/2
12	S100-101-193-EU-12	Drawer Front	1	2/2
13	S100-101-193-EU-13	Drawer Base	1	2/2
14	S100-101-193-EU-14	Drawer Bottom Support Rail	1	2/2
15	S100-101-193-EU-15	Door 1	1	2/2
16	S100-101-193-EU-16	Door 2	1	2/2


HARDWARE LIST

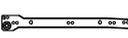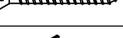A		DOWEL 6 X 30MM	20 PCS	O		DRAWER RUNNER A - L/R	2 PCS
B		BOLT M6 X 50MM	4 PCS	P		DRAWER RUNNER B - L/R	2 PCS
C		SCREW M6 X 50MM	8 PCS	Q		SCREW M4 X 30MM	2 PCS
D		SCREW M3.5 X 16MM	20 PCS	R		HANDLE SCREW 19MM	3 PCS
E		TACK	46 PCS	S		SCREW M3.5 X 12MM	20 PCS
F		SCREW M4 X 50MM	16 PCS	T		CAM BOLT + CAM NUT	3 SETS
G		HANDLE	3 PCS	U		WOOD FOOT	4 PCS
H		TAPPING SCREW M8 X 12MM	12 PCS	V		SHELF SUPPORT	4 PCS
I		HANGING RAIL SUPPORT	2 PCS	W		SCREW M4 X 38MM	2 PCS
J		HANGING RAIL	1 PC	X		ANTI - TIP STRAP	2 PCS
K		PLASTIC H STRIP	3 PCS	Y		SCREW M4 X 16MM	2 PCS
L		ALLEN KEY	1 PC				
M		PVC STOPPER	2 PCS				
N		HINGES 7/8	6 PCS				

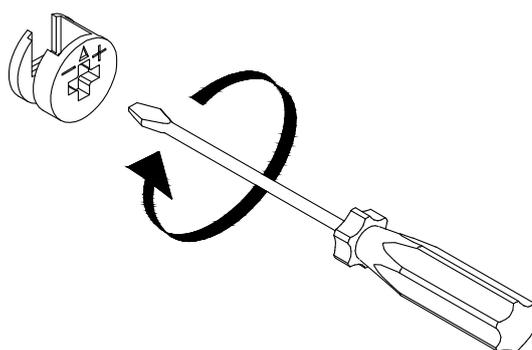

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

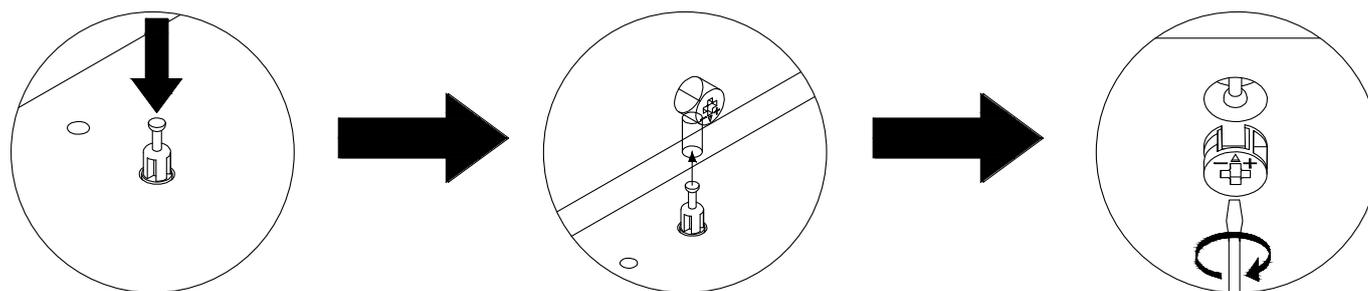

STEP 1 - PUSH CAM BOLT INTO INSERT.

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSSES OVER THE BOLT.

STEP 1


PARTS REQUIRED

1 - SIDE PANEL - RIGHT x1

HARDWARE REQUIRED

A  04





I  01

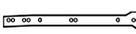O  01

S  06

V  02

TOOLS REQUIRED

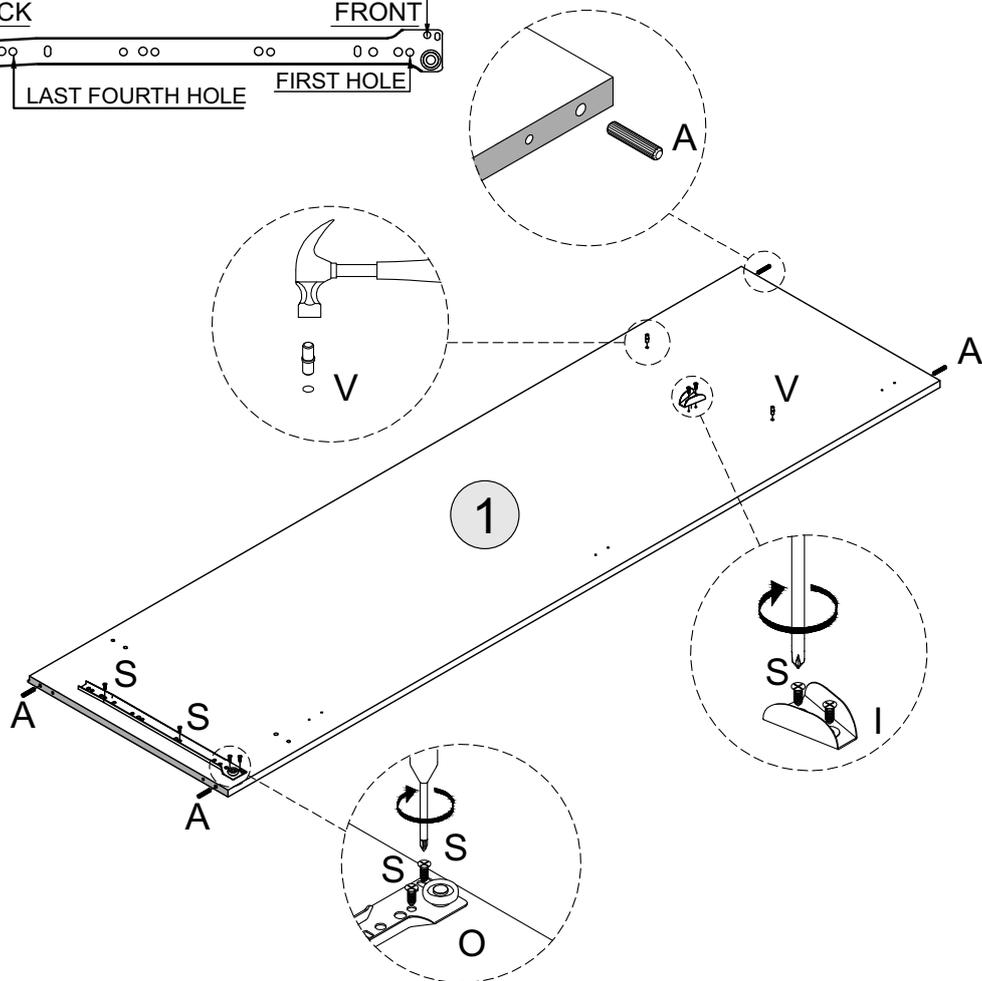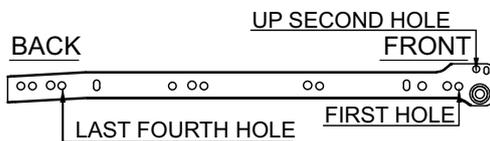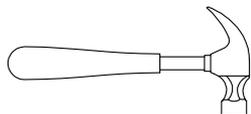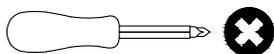

STEP 2


PARTS REQUIRED

3 - SIDE PANEL - LEFT x1

HARDWARE REQUIRED

A  04





I  01

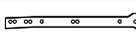O  01

S  06

V  02

TOOLS REQUIRED

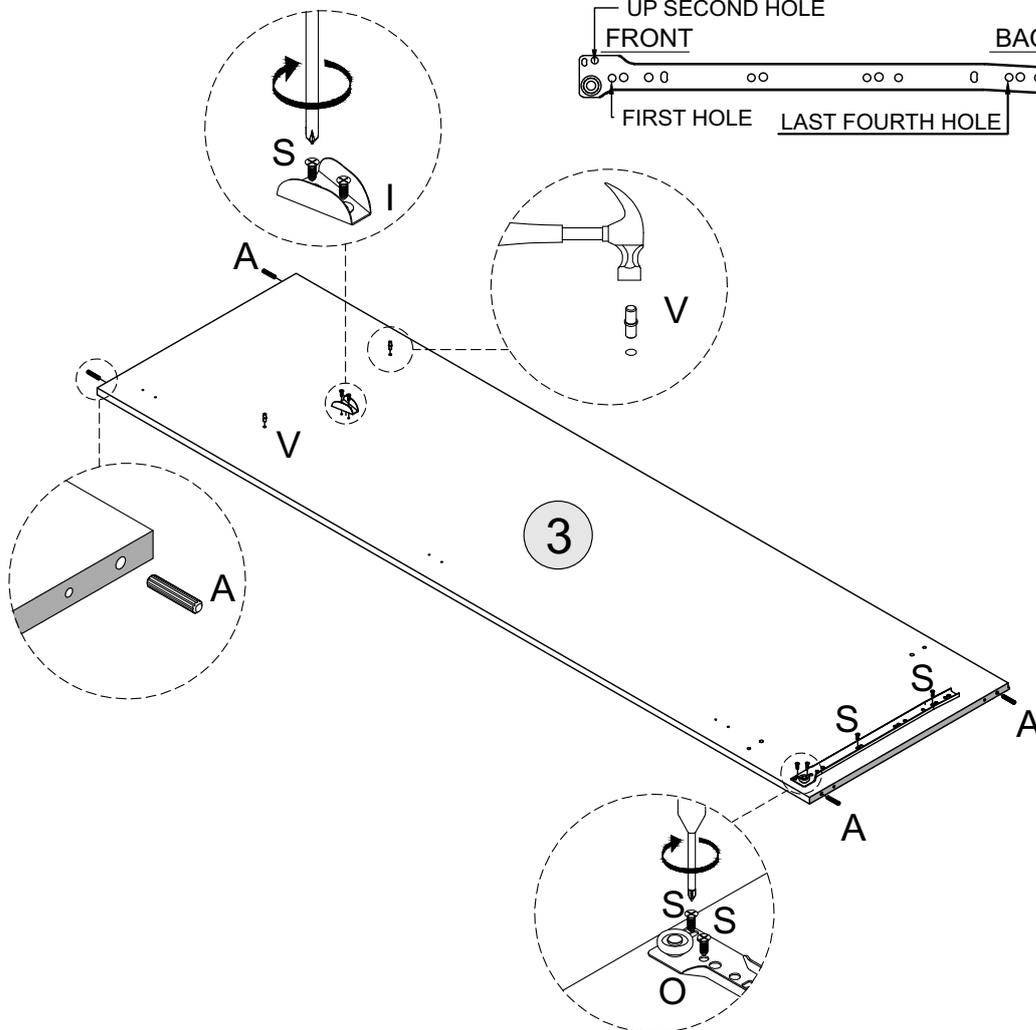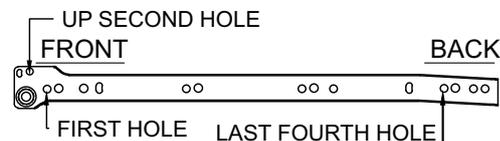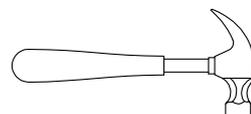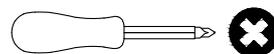

STEP 3



PARTS REQUIRED

2 - SHELF PANEL	x1
4 - TOP PANEL	x1

HARDWARE REQUIRED

A		04
D		02
M		02

TOOLS REQUIRED

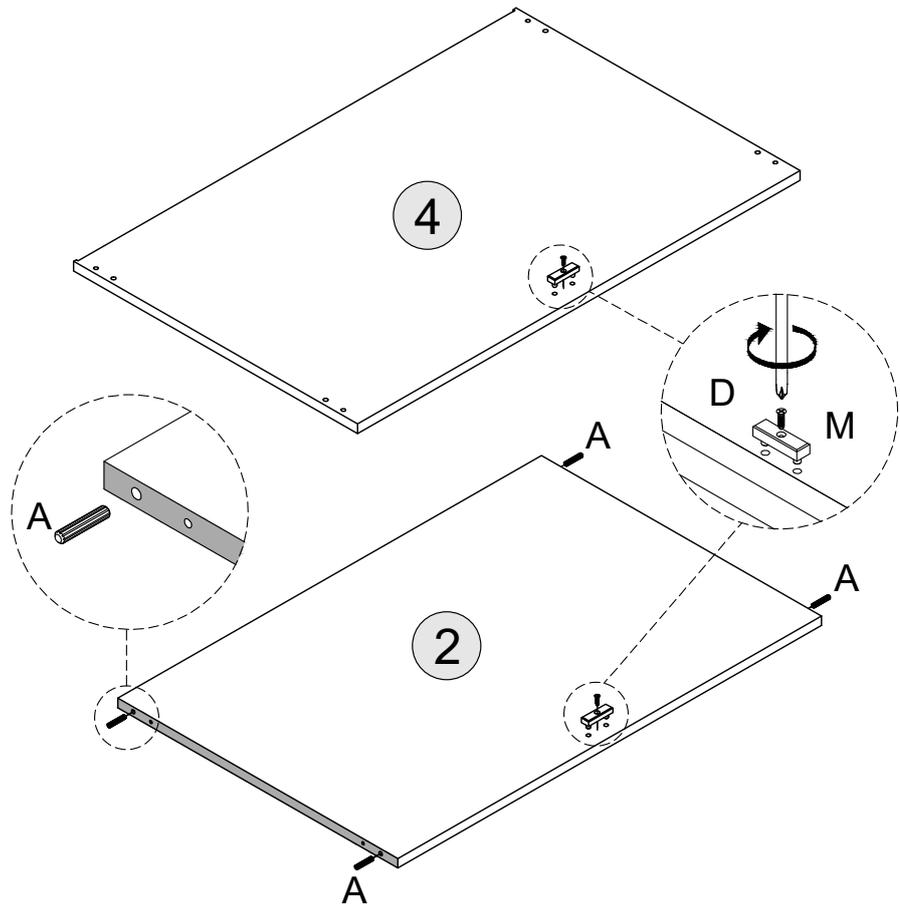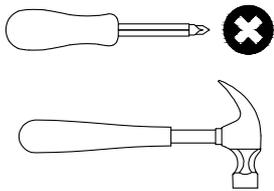


STEP 4


PARTS REQUIRED

1 - SIDE PANEL - RIGHT	x1
2 - SHELF PANEL	x1
3 - SIDE PANEL - LEFT	x1

HARDWARE REQUIRED

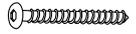B		04
---	---	----


TOOLS REQUIRED

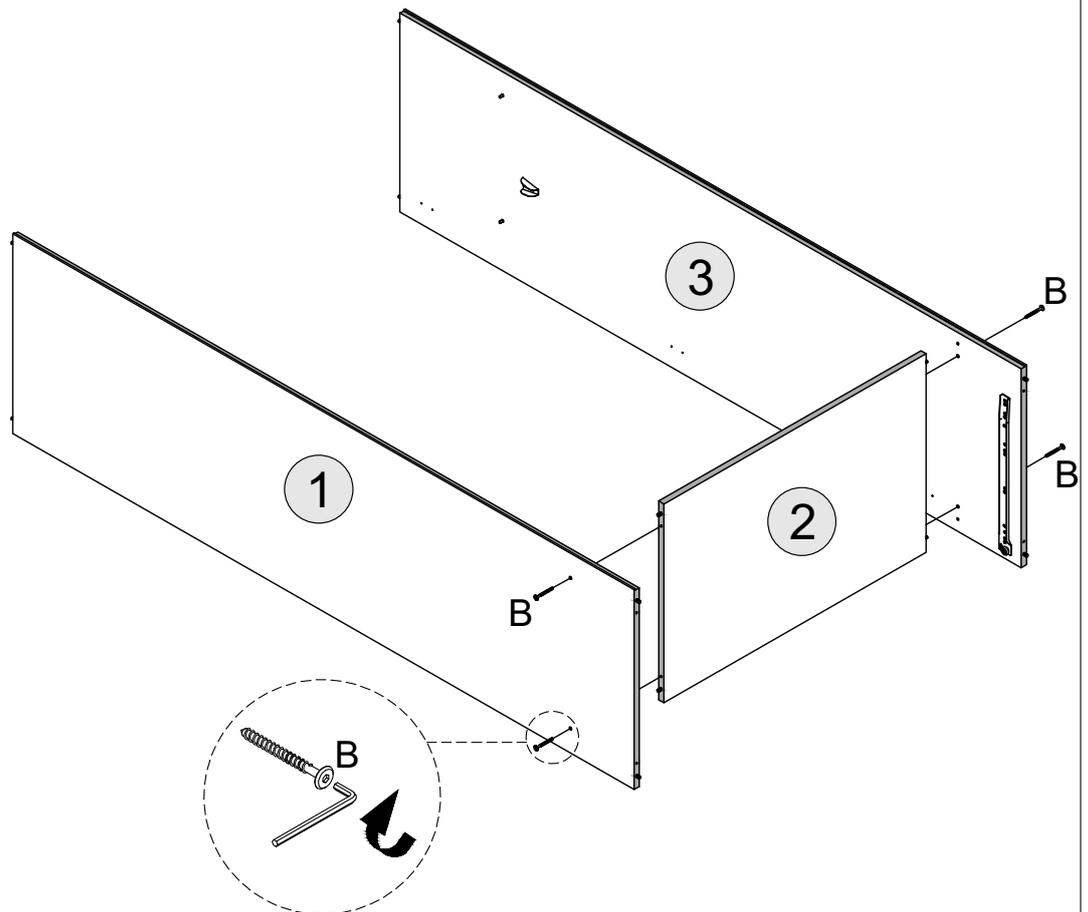

STEP 5

PARTS REQUIRED


4 - TOP PANEL x1

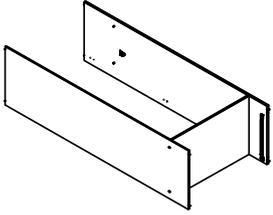

HARDWARE REQUIRED

C  04


TOOLS REQUIRED

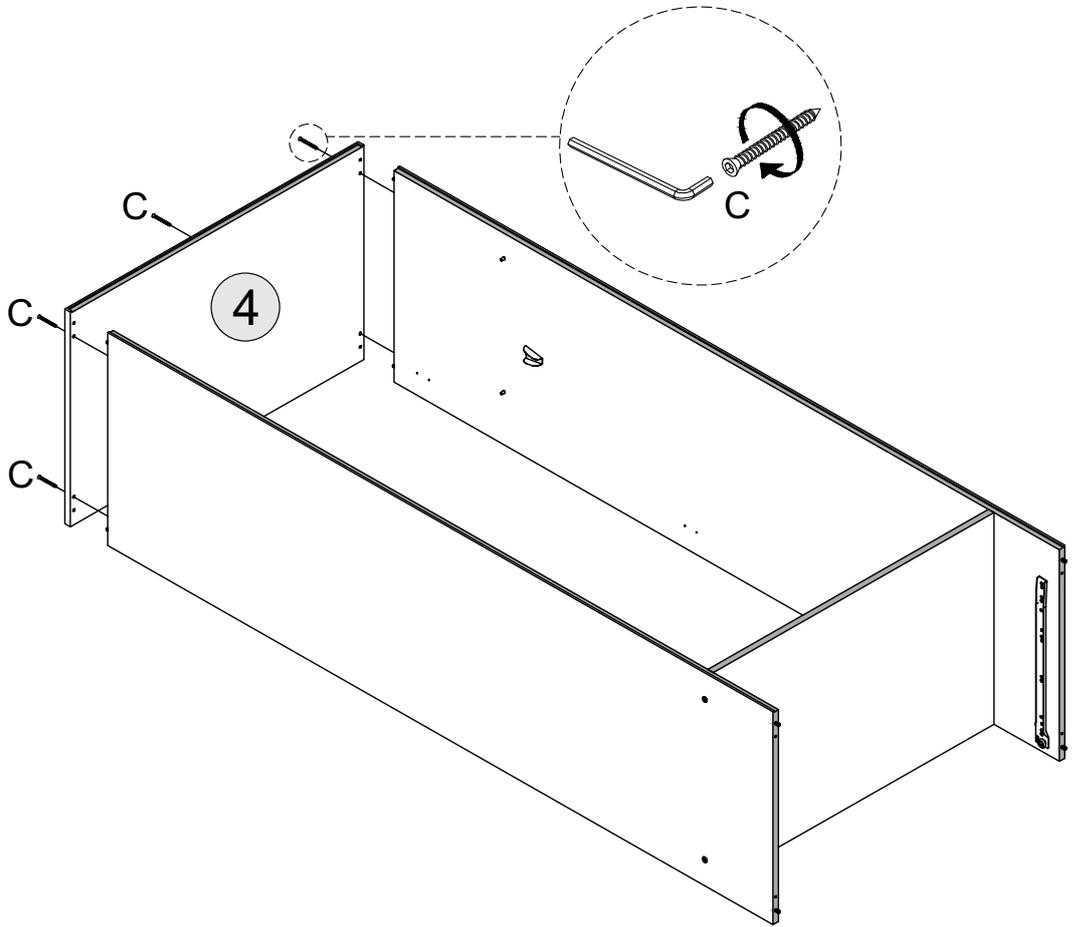

STEP 6

PARTS REQUIRED


5 - BOTTOM PANEL x1

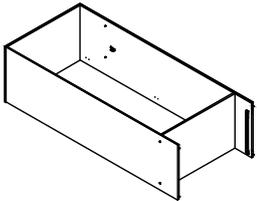

HARDWARE REQUIRED


C  04

TOOLS REQUIRED

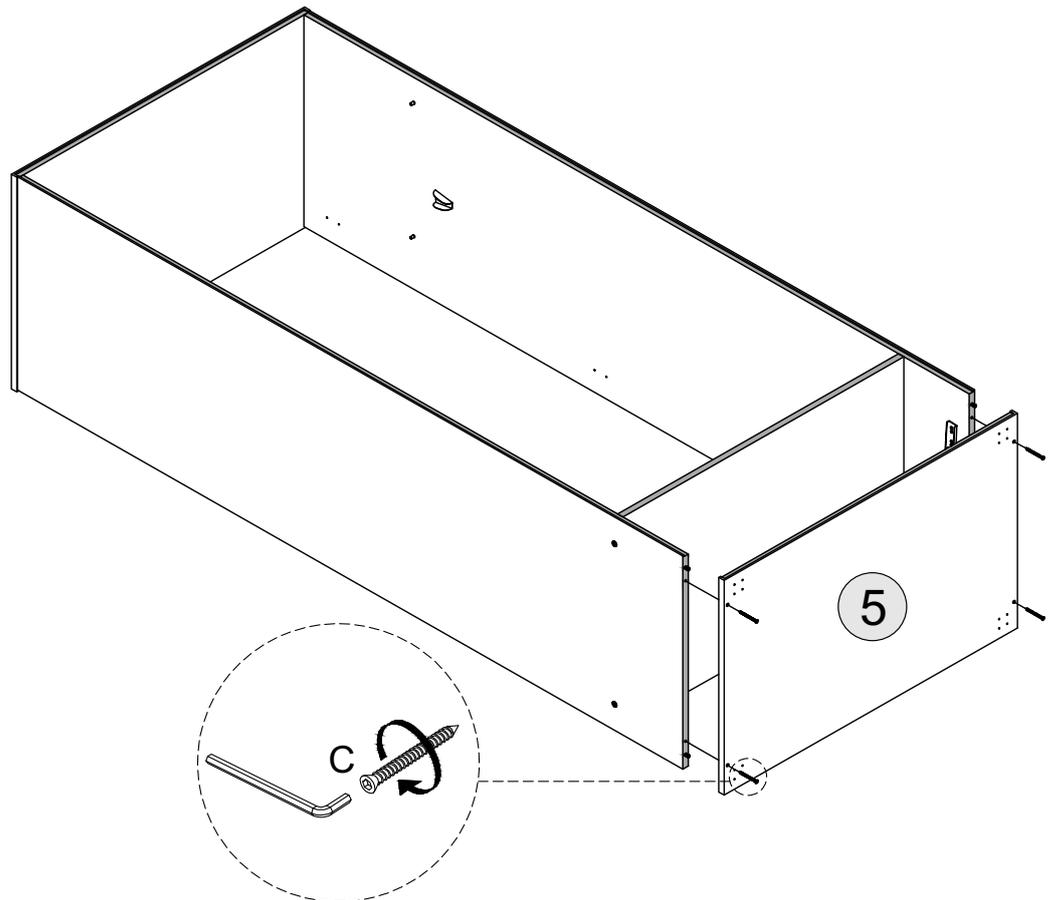

STEP 7



PARTS REQUIRED

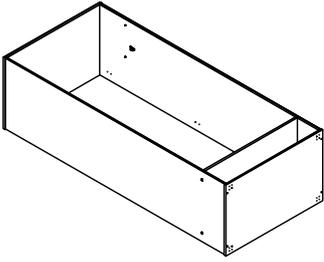

HARDWARE REQUIRED




TOOLS REQUIRED

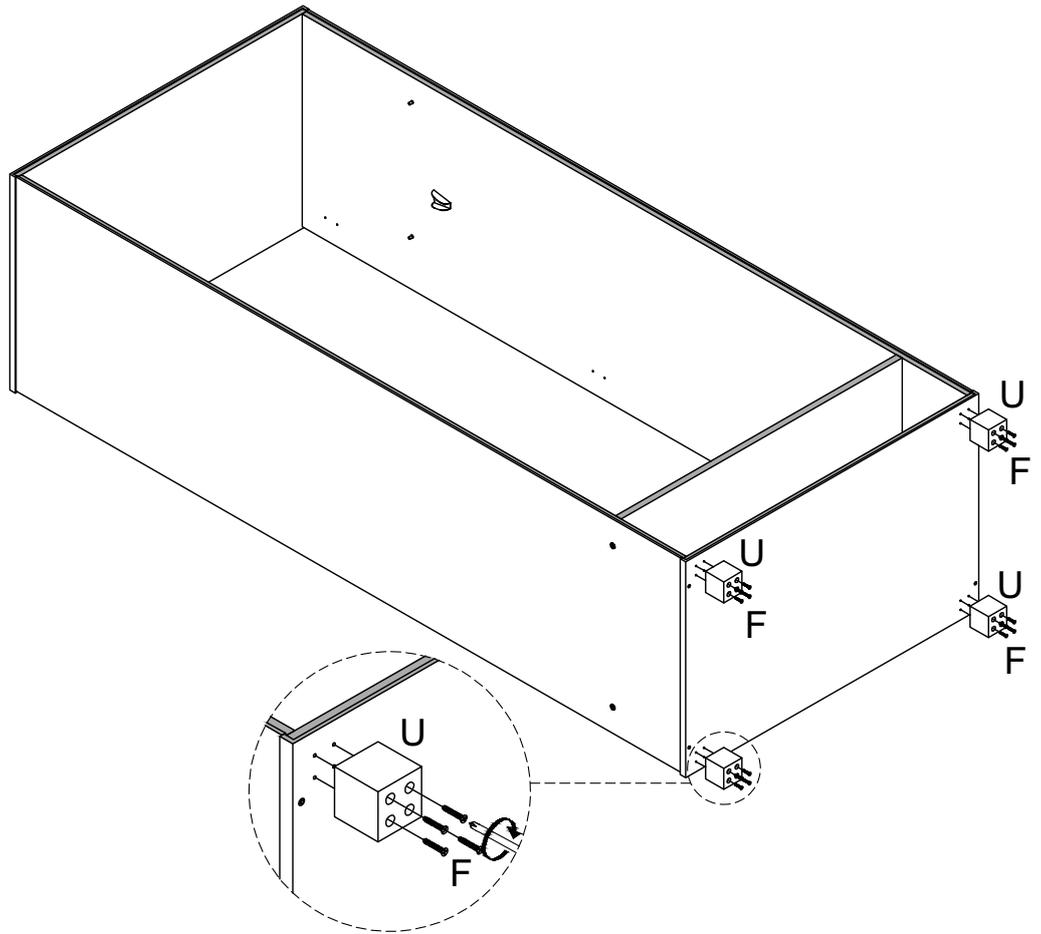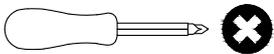


STEP 8



PARTS REQUIRED

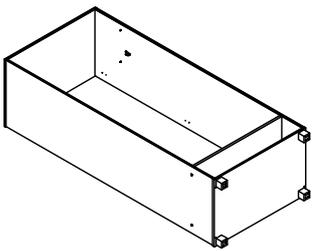

HARDWARE REQUIRED

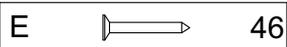

TOOLS REQUIRED

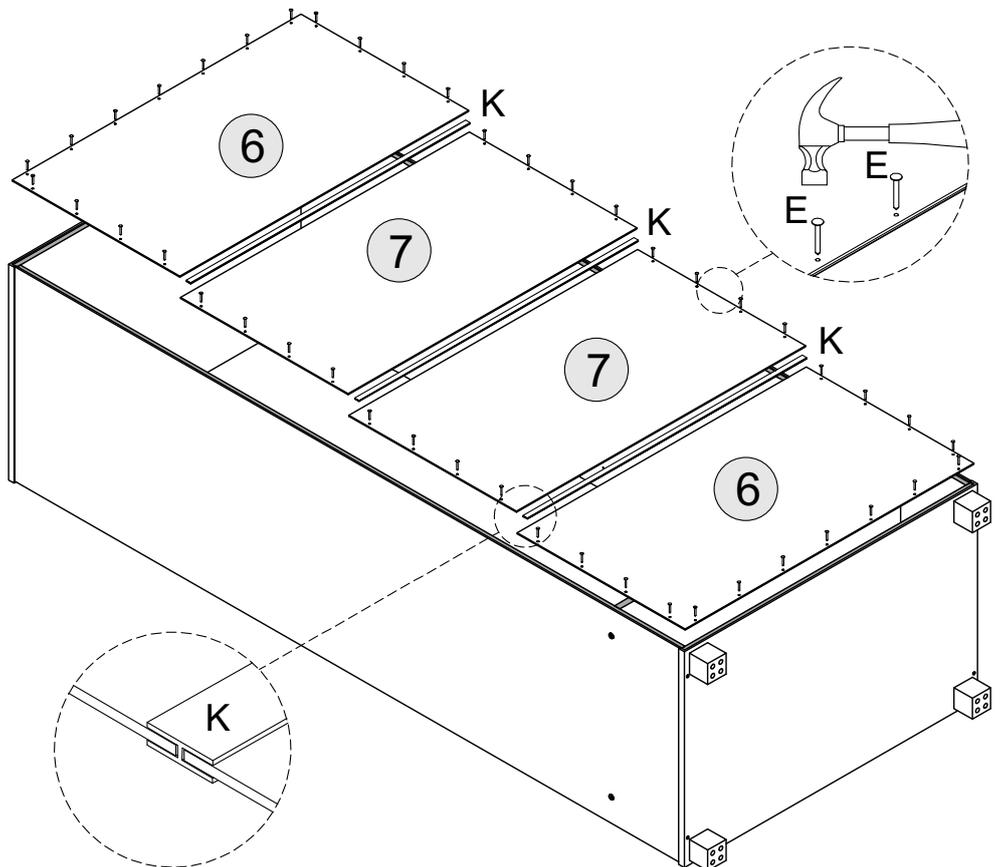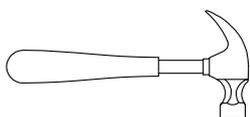

STEP 9



PARTS REQUIRED

9 - DRAWER BACK	x1
10 -DRAWER SIDE-LEFT	x1
11 -DRAWER SIDE-RIGHT	x1
12 - DRAWER FRONT	x1

HARDWARE REQUIRED

A		08
T		03
W		02


TOOLS REQUIRED

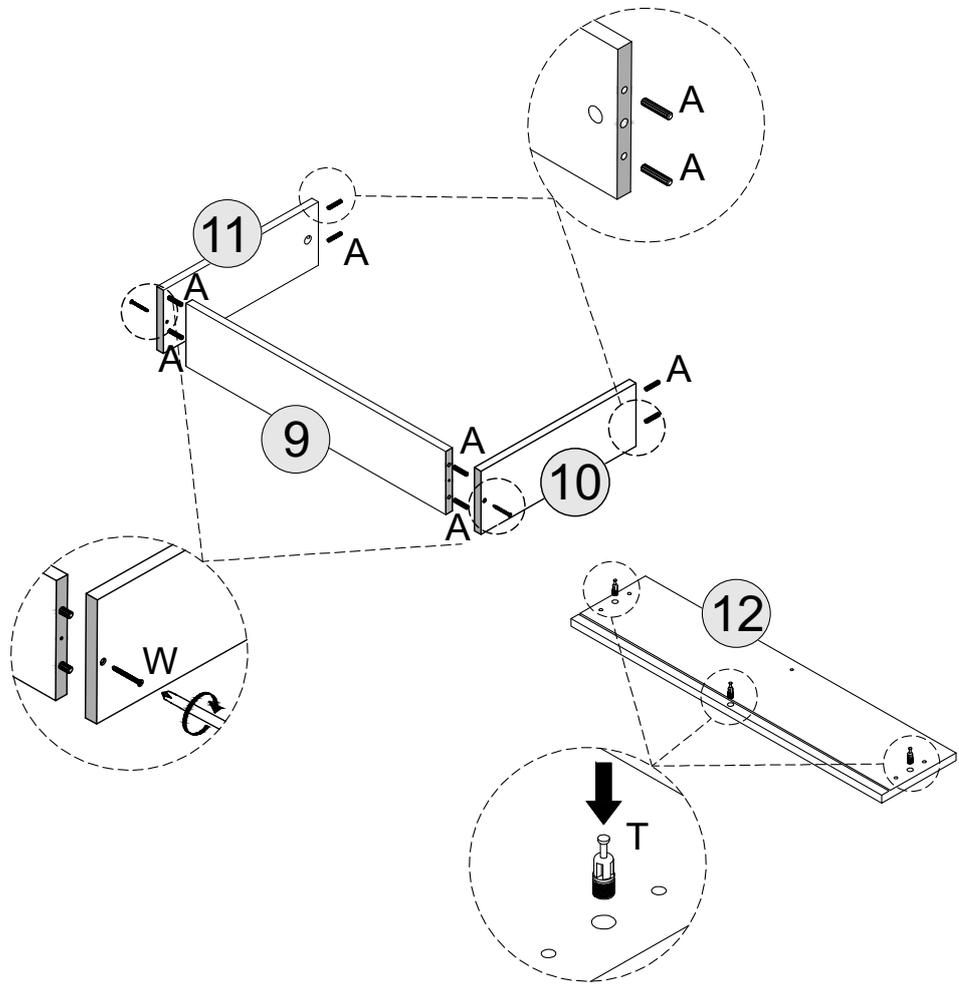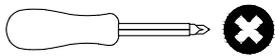

STEP 10

PARTS REQUIRED



13 - DRAWER BASE	x1
------------------	----

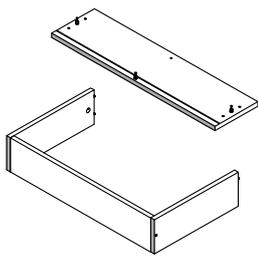

HARDWARE REQUIRED

G		01
R		01
S		08
T		02


TOOLS REQUIRED

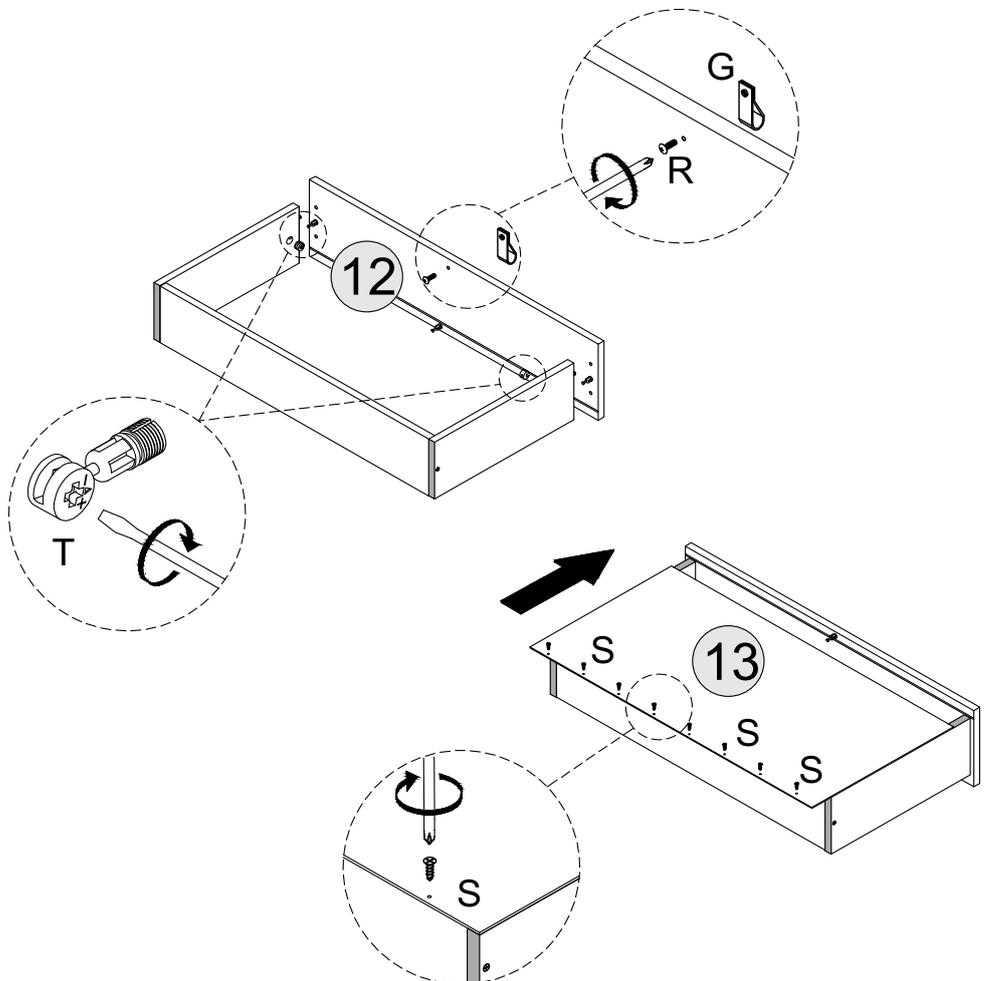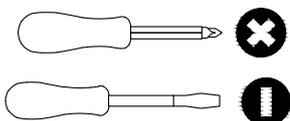




STEP 11

PARTS REQUIRED



14 -DRAWER BOTTOM SUPPORT RAIL x1

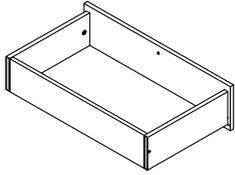

HARDWARE REQUIRED

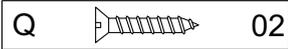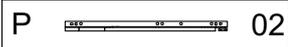
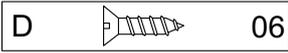


TOOLS REQUIRED

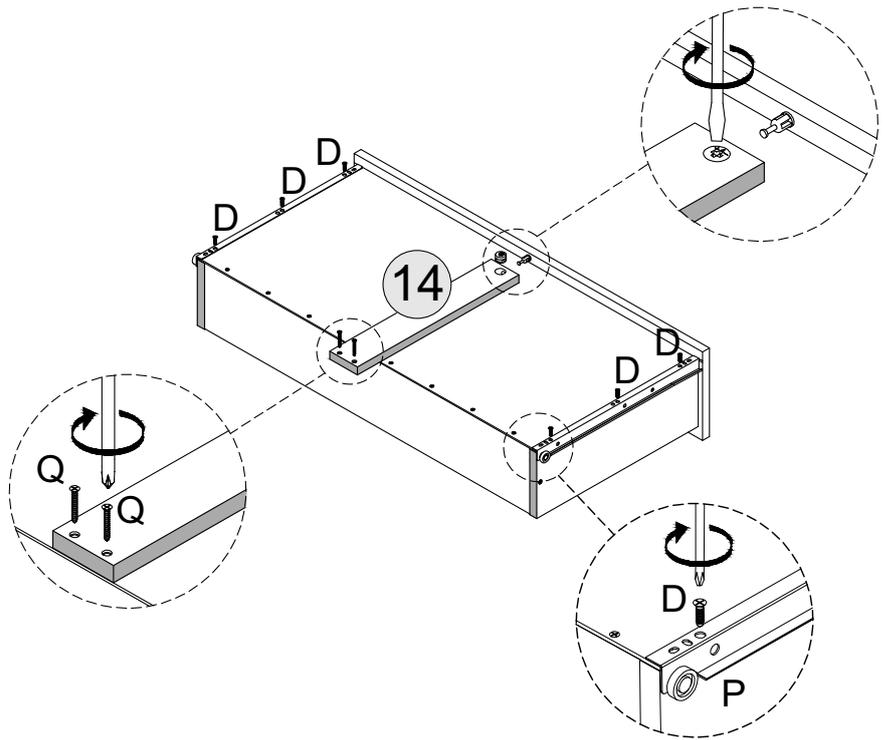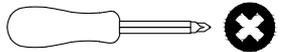


STEP 12

PARTS REQUIRED

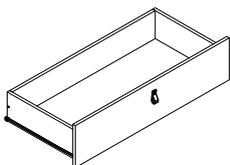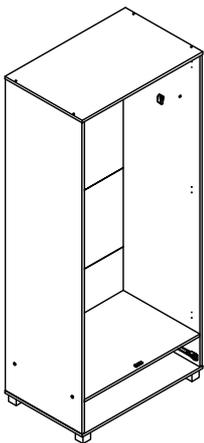

HARDWARE REQUIRED


TOOLS REQUIRED

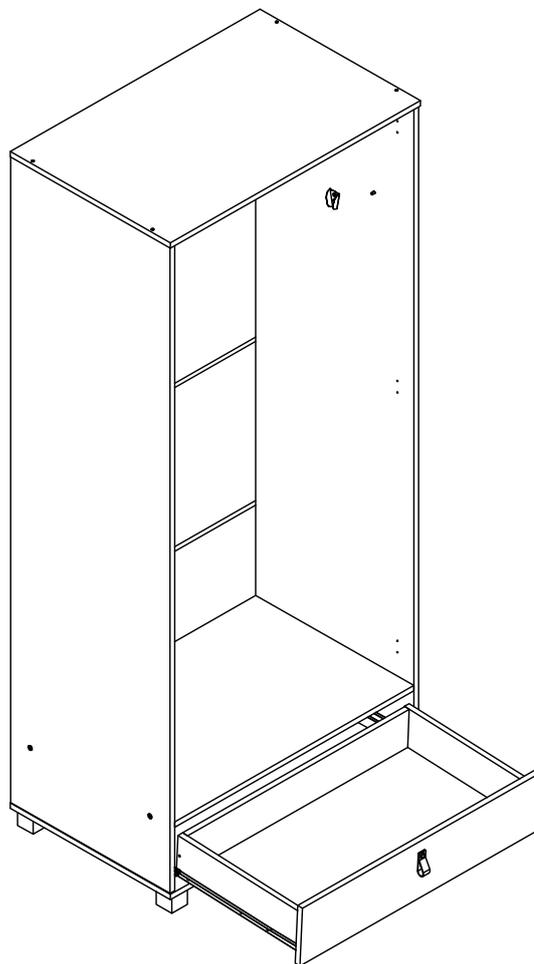

STEP 13

PART REQUIRED


8 - SMALL SHELF PANEL x1

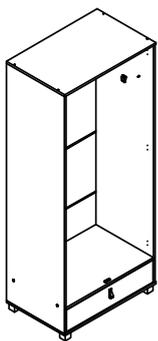

HARDWARE REQUIRED

J  01

TOOLS REQUIRED

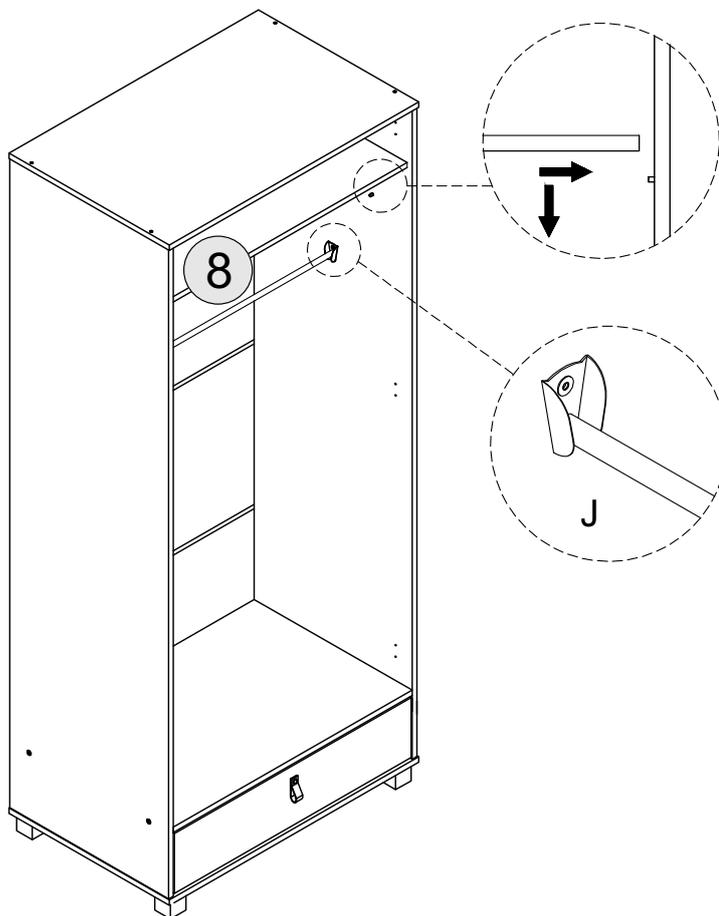

STEP 14

PARTS REQUIRED

15 - DOOR 1 x1



16 - DOOR 2 x1

HARDWARE REQUIRED

D  12

N  06


TOOLS REQUIRED

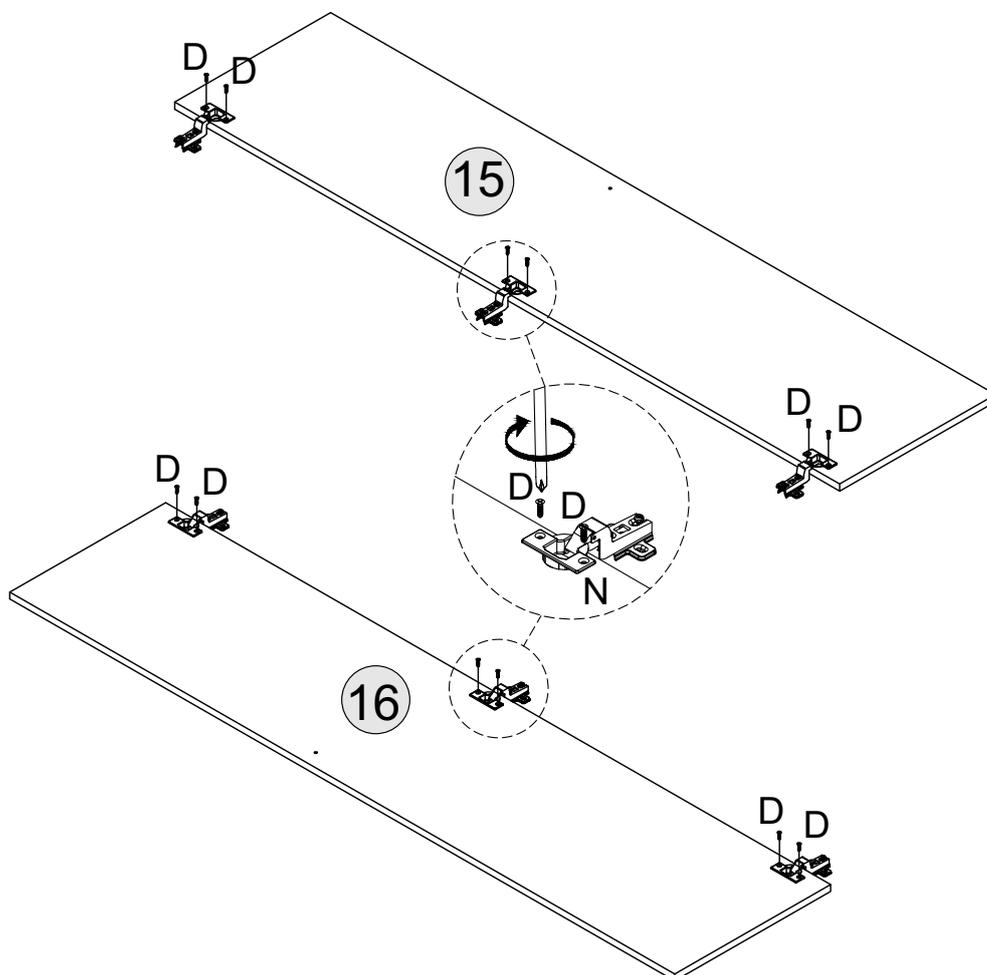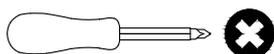

STEP 15

PARTS REQUIRED



15 - DOOR 1	x1
16 - DOOR 2	x1

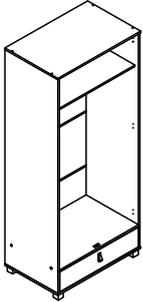


HARDWARE REQUIRED

H		12
G		02
R		02


TOOLS REQUIRED

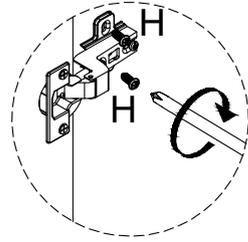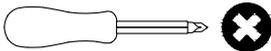


1. VERTICAL ADJUSTMENT VIA SLOT IN THE MOUNTING PLATE

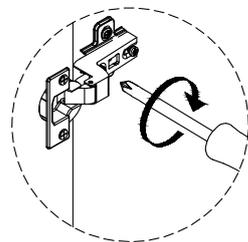

2. LATERAL ADJUSTMENT BY SCREW ADJUSTING

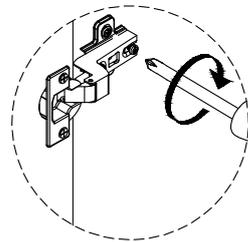


3. FRONT-TO-BACK BY THE SLACKING THE HINGE ARM MOUNTING SCREW

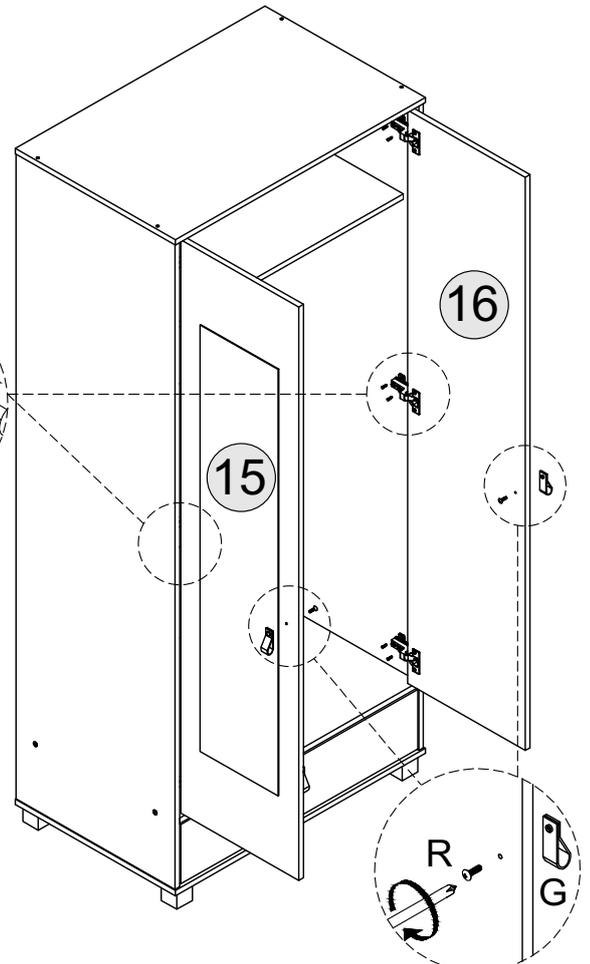

YOU SHOULD RE-ADJUST SCREWS AS SHOWN TO ALIGN DOOR ONCE HINGES HAVE BEEN ATTACHED.

STEP 16


PART REQUIRED

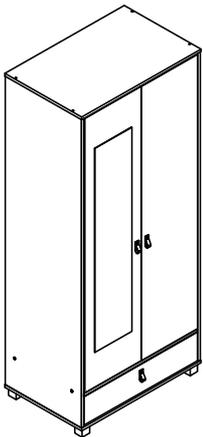

HARDWARE REQUIRED

X		02
Y		02

TOOLS REQUIRED

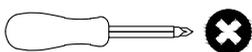

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

